


## Display

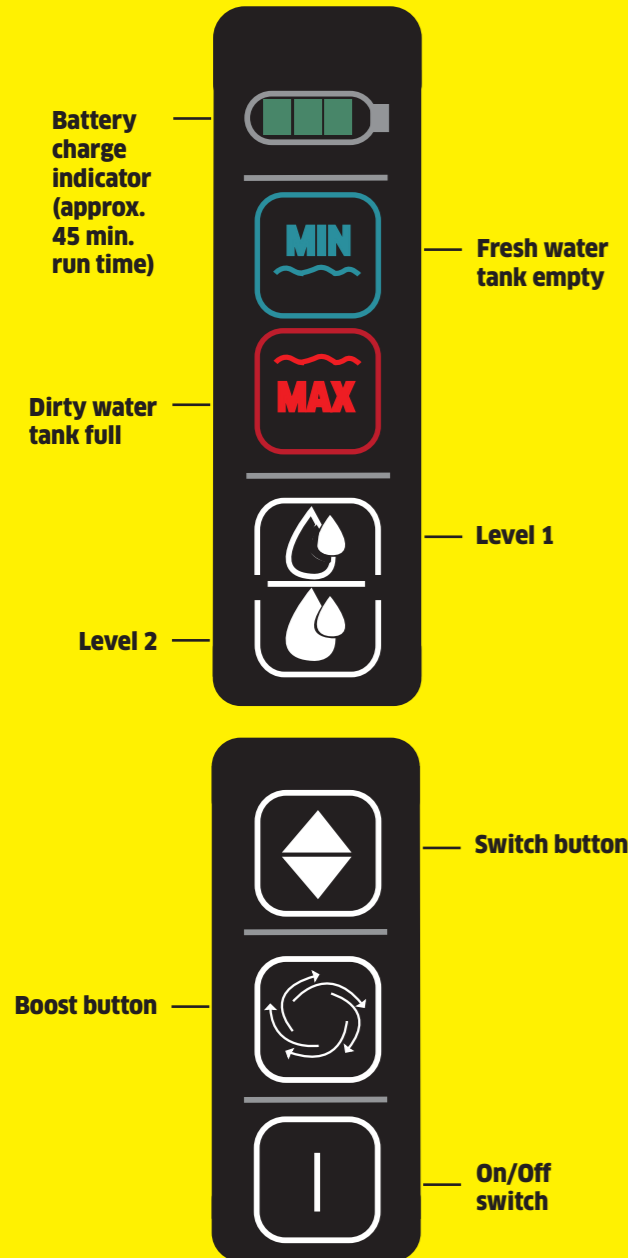

Scan code for videos




[www.kaercher.com/fc7](http://www.kaercher.com/fc7)



# FC 7 CORDLESS QUICKSTART GUIDE

## First assembly

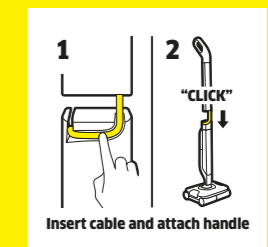

## First steps before use

- Charge (max. 4h)
- Fill fresh water tank
- Fill in detergent (1/2 cap)
- Insert
- Place dirty water tank on floor
- Put device upon the tank
- Press On/Off button
- Press boost button until rollers are wet








## Switch cleaning mode







## Activate boost function



## Refill fresh water tank







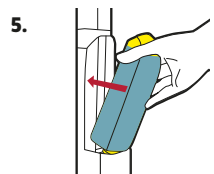
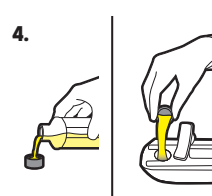
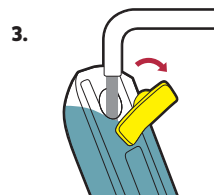
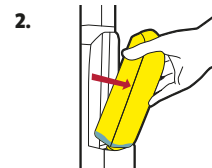
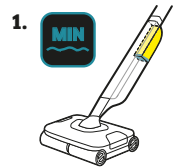


## Empty dirty water tank

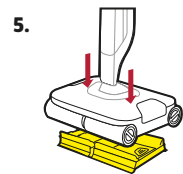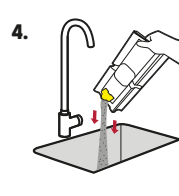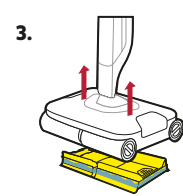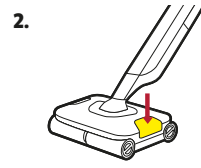

## Cleaning and storing

### Step 1: Clean the device

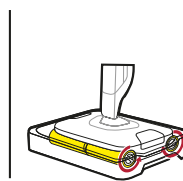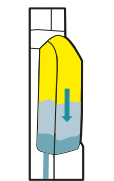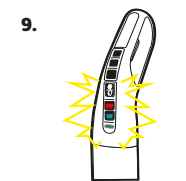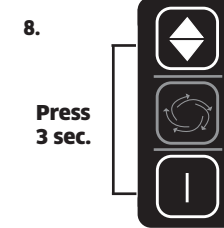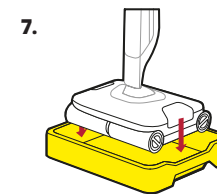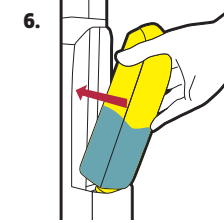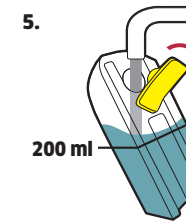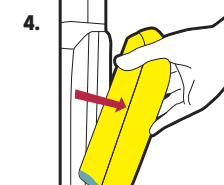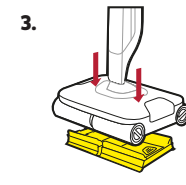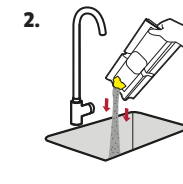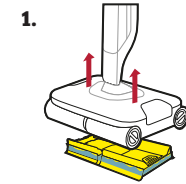

Please wait about 2 min.

### Step 2: Store the device

