

Display



Home Robots App



K'ARCHER

RCF 3 QUICKSTART GUIDE

Scan for details



www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions



On/Off

Press for start, pause, turn off (5 sec)
Press together with Home (5 sec) for WiFi connection



Home

Press to send robot to station
Press together with On/Off (5 sec) for WiFi connection



Robot state

Off: device off or in sleep mode
Yellow: Standby Mode
Blue: device cleans
Red: error indication
For more LED signals see user manual



Battery

Off: device off or in sleep mode
Green (breathing): Fully charged (charging)
Yellow: 10-29% battery capacity
Red blinking: <10% battery capacity



WiFi

Off: device off or not connected
Blue: Online
Blue breath: Reset WiFi / Connecting to WiFi
Red blinking: Offline



Min fresh water

Blue blinking: Fresh water tank empty



Max dirt water

Red blinking: Dirt water tank full

Install device

- Consider correct positioning
(Only on water resistant floors!)
- Place robot on charging station

- Download Home Robots App

- Add robot
- Press On/Off and Home to connect to WiFi

- Follow the configuration steps in the App
- Device is now ready for use

Start cleaning

- Detach tank unit
- Fill fresh water tank with water and detergent
- Attach tank unit
- Turn on device

Cleaning of device

- Detach dirt water tank
- Empty dirt water tank

- Clean dirt water tank
- Attach dirt water tank
- Remove roller unit
- Detach roller
- Wash roller in washing machine
- Clean roller unit
- Clean hair comb
- Attach roller unit

